


Controller Introduction

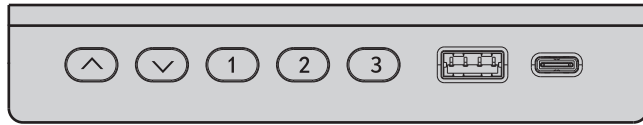

Note:

The desk's movement can be stopped at any time by pressing any button.

The height settings of the desk will remain even if the power is cut.

- Long press the button to raise the desk continually, and desk will stop when the button was released or at the max height (46.5" / 118cm)
- Long press the button to lower the desk continually, and desk will stop when the button was released or at the lowest height (28.3" / 72cm)
- Memory button: Adjust the desk to the height you prefer, then long press the button until S- shows up, and the height memory setting is done.
- Charging via USB & Type-C


Reset Long press for 5 seconds, display RES and keep pressing until the digit height on the panel comes then lose the button. In the process, the desk goes down to the lowest and its height will be reset to 28.3" / 72cm.

Protection Mode Error Codes

Hot	Overheating Protection: When the motor has been working continuously for 5 minutes, it will stop operating to prevent damage from overheating. Wait for at least 15 minutes before making any further height adjustment.
E10	Sensor malfunction warning: Motor safety sensor cannot be detected. Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E20	Overloading Warning: Over the max of loading weight. Power off, take the things off the desk, power back on, and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline is detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
-	Cable Disconnection Warning: Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.

USER MANUAL

Sit and Stand Desk Assembly Instruction

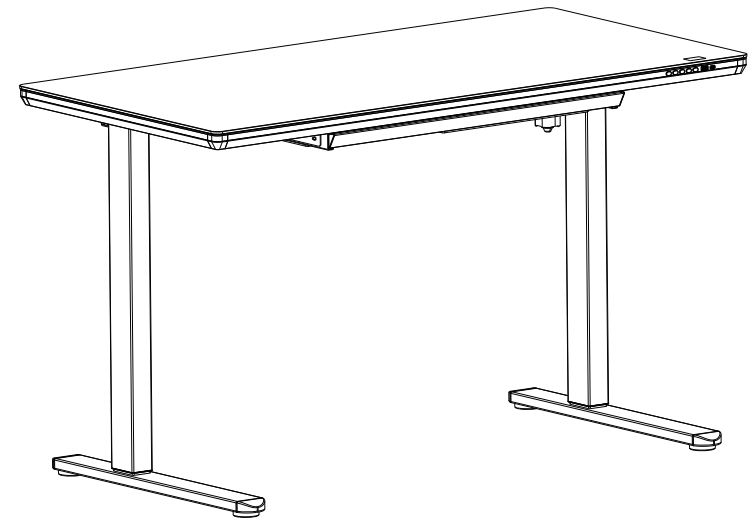

- 3 Height Position Memory
- Vertical Range: 72-118cm



Power Input
100V-240V



Speed
20 mm/s




Motion Noise
<55dB



Load Capability
110 lbs / 50 kg


**CAUTION: DO NOT EXCEED
MAXIMUM LISTED WEIGHT
CAPACITY. SERIOUS INJURY
OR PROPERTY DAMAGE MAY
OCCUR!**

COMPONENT LIST


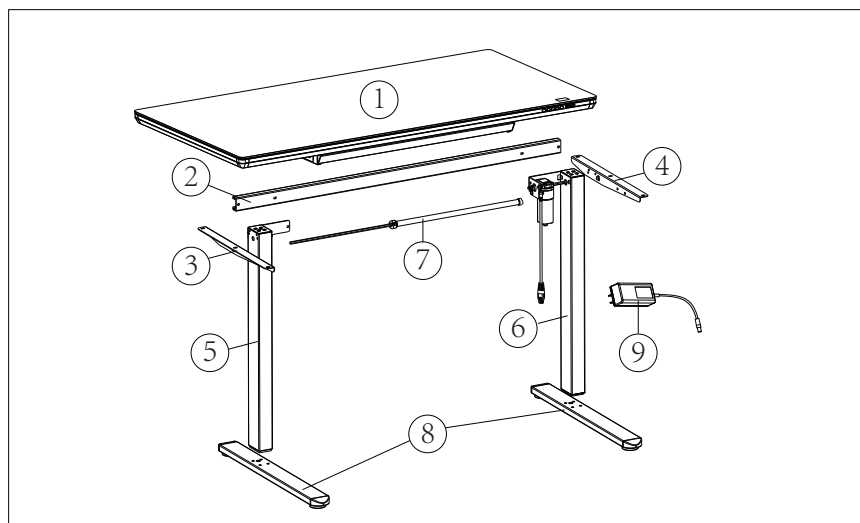


Desktop (x1)	Crossbar (x1)	Left Side Plates (x1)
Right Side Plates (x1)	Left Table Leg (x1)	Right Table Leg (x1)
Transmission rod (x1)	Leg Base (x2)	Power (x1)



Step 7

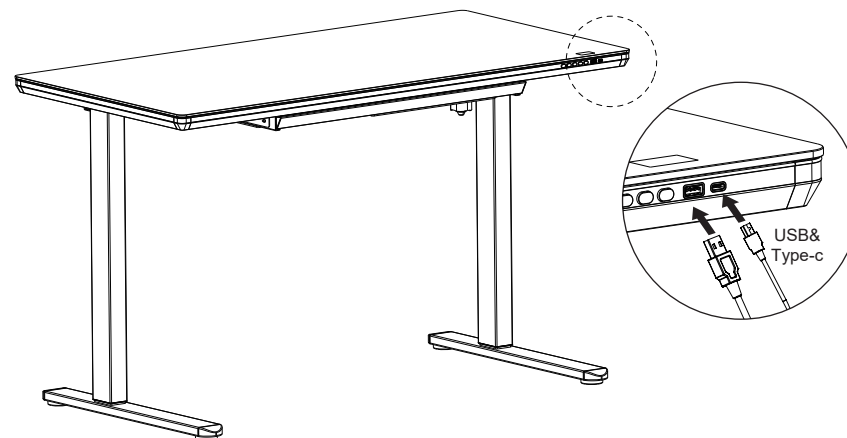


Step 5

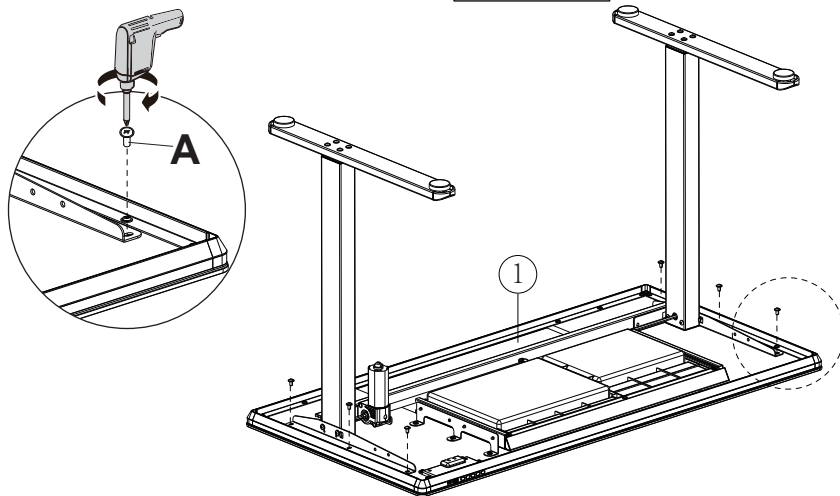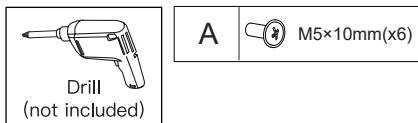







Step 6

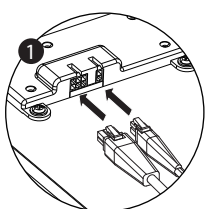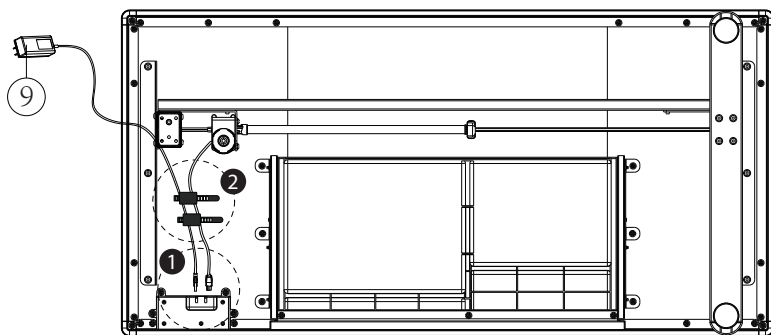


Cable Management

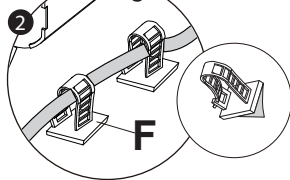


HARDWARE LIST

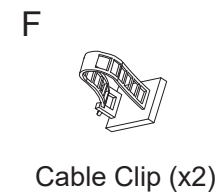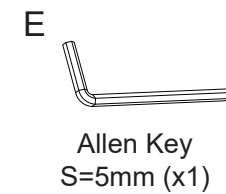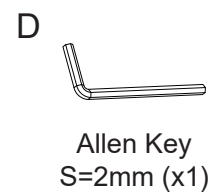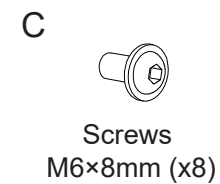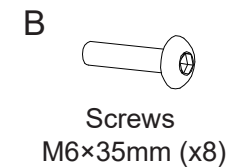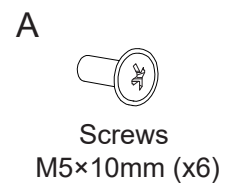


Spare Parts

 


Step 1

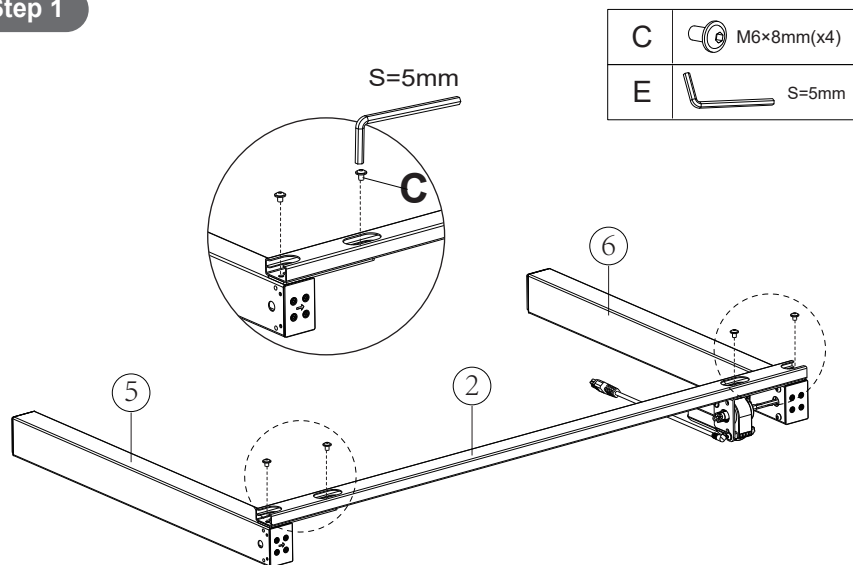

Step 2

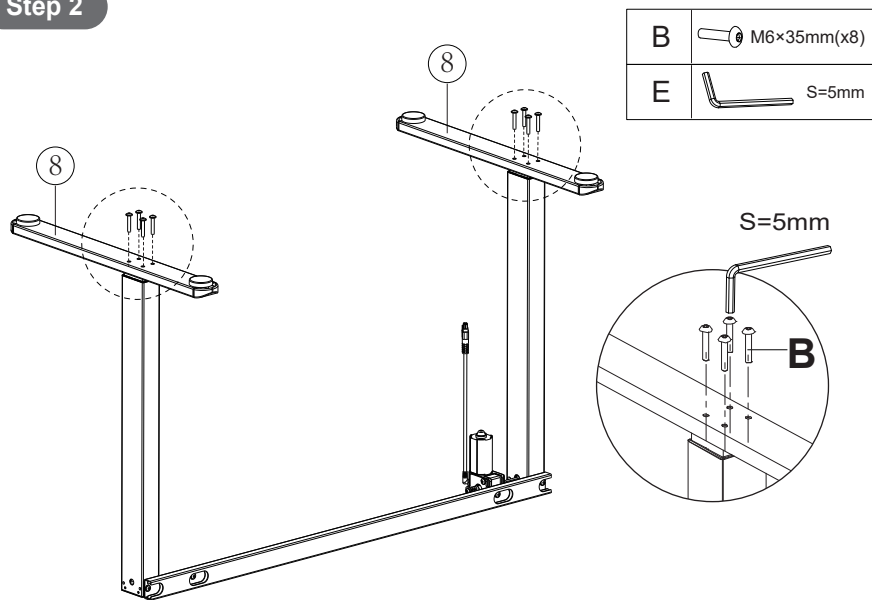

Step 3

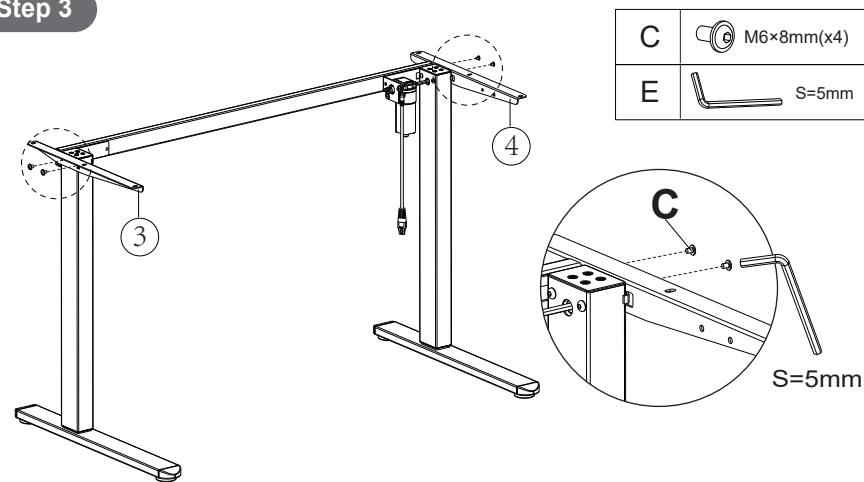

Step 4

