 


USER MANUAL

Dual Motor Sit Stand Desk Frame Assembly Instruction

 UPLITE

UPTF52DE

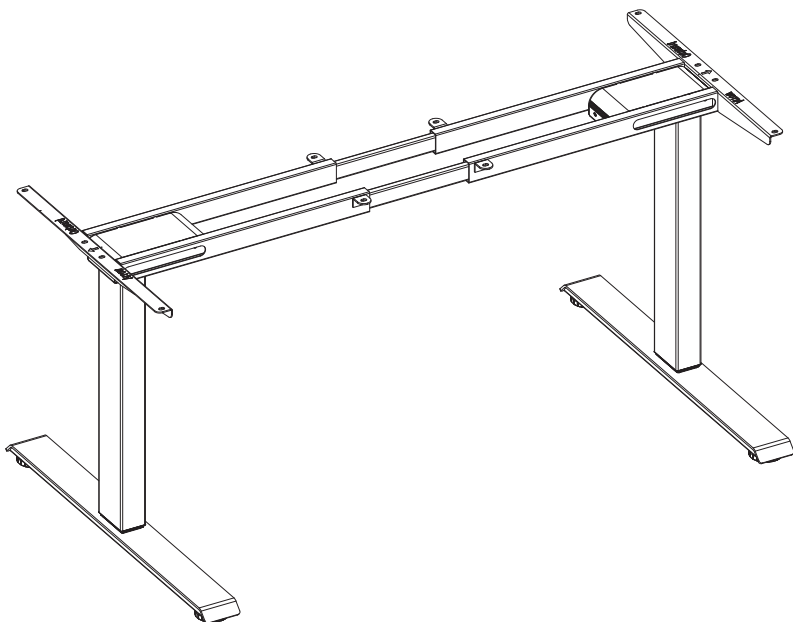

- 3 Height Position Memory
- Vertical Range: 72-120cm



Power Input
100V-240V



Speed
30 mm/s




Motion Noise
<55dB










Load Capability
264 lbs / 120 kg

**CAUTION: DO NOT EXCEED
MAXIMUM LISTED WEIGHT
CAPACITY.SERIOUS INJURY
OR PROPERTY DAMAGE MAY
OCCUR!**

COMPONENT LIST

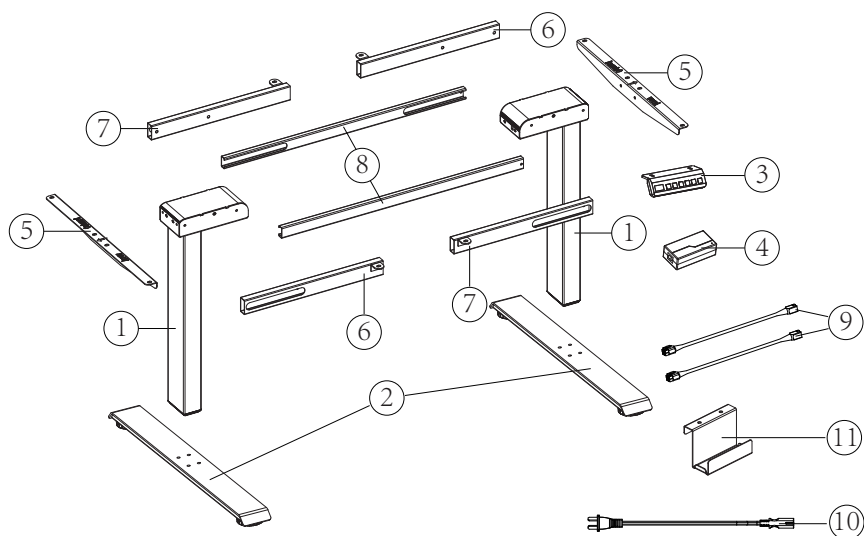 

        Table Leg (x2)	 Leg Base (x2)	 Control Panel (x1)
 Power (x1)	 Side Plate (x2)	 Crossbar (x2)
 Crossbar (x2)	 Connector (x2)	 Connection line (x2)
 Power cord (x1)	 Sheet metal parts (x1)	

 
HARDWARE LIST

A



Screws
M6×11mm (x20)

B



Screws
M5×15mm (x20)

C



Screws
M6×15mm (x8)

D



Allen Key
S=5mm (x1)

E



Headphone hanger (x2)

F



Cable Clip (x2)

SPARE PARTS



A

M6×11mm (x2)



B

 
M5×15mm (x2)



C


M6×15mm (x1)

STEP 1

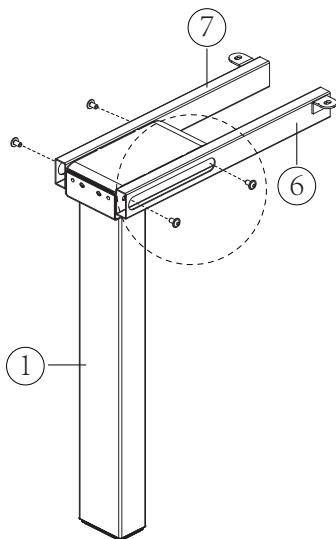


X2

A	 M6×11mm(x8)
D	 S=5mm

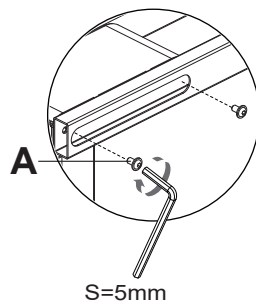 


 STEP 2

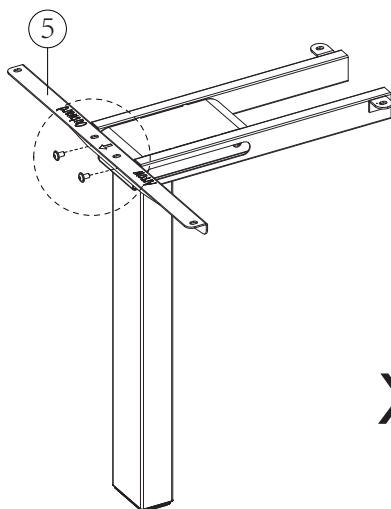



X2

A	 M6×11mm(x4)
D	 S=5mm

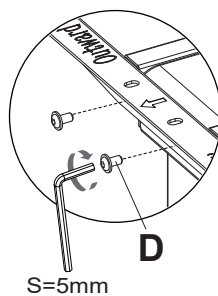 


STEP 3

C	 M6×15mm(x8)
D	 S=5mm

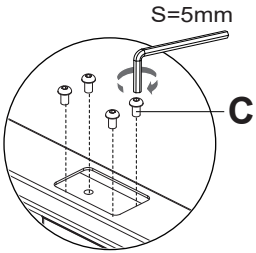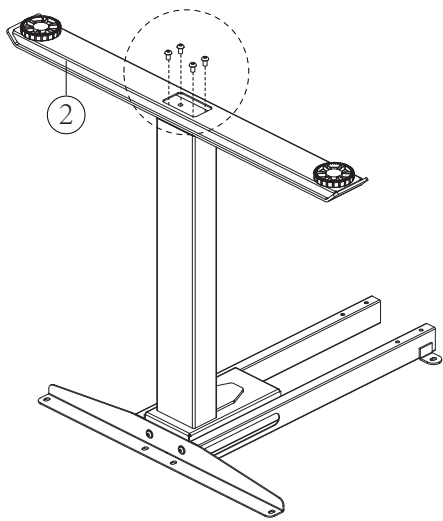  


X2

 
STEP 4

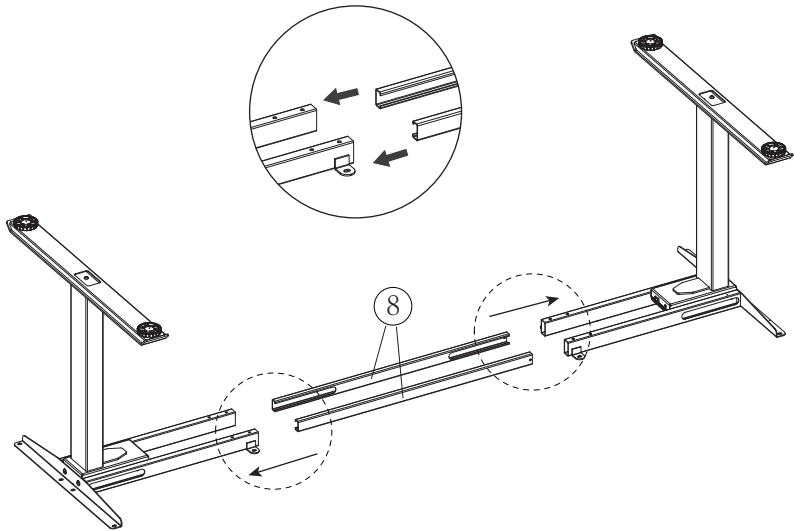

 
STEP 5

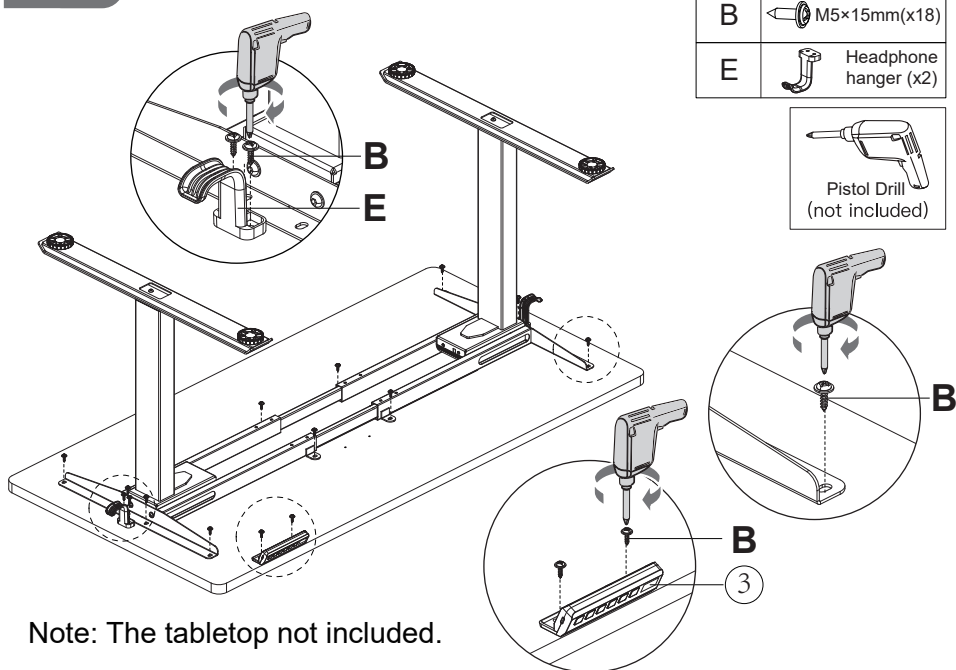

 STEP 6

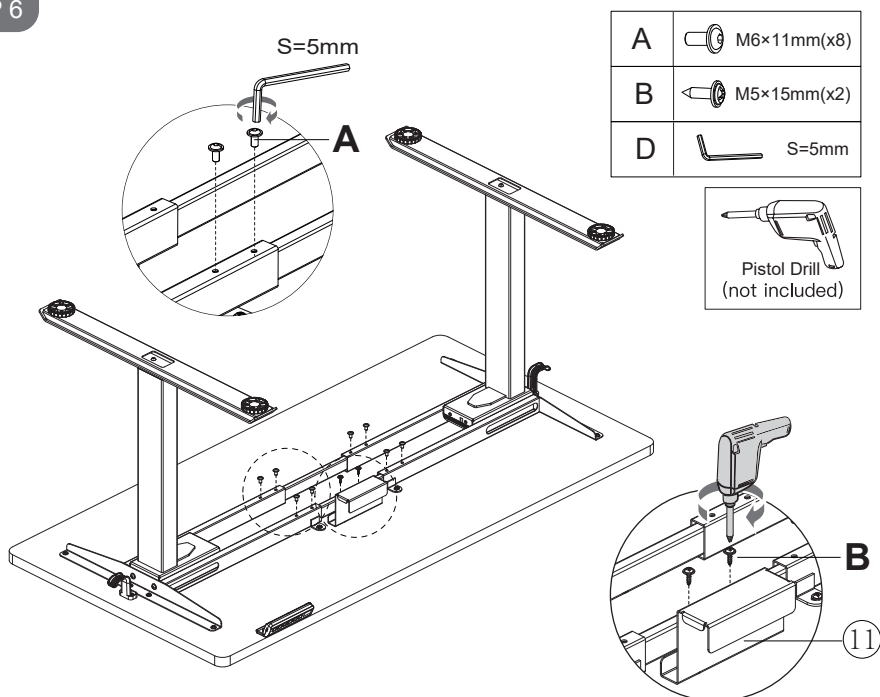

 STEP 7






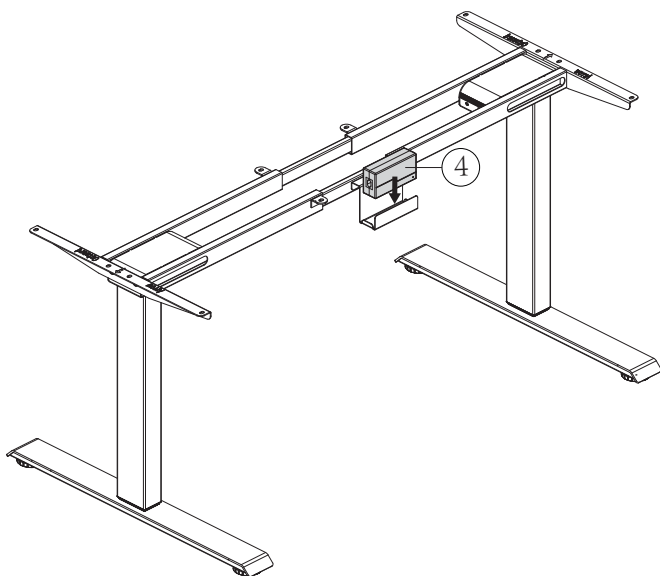


STEP 8


F



      Cable Clip (x2)

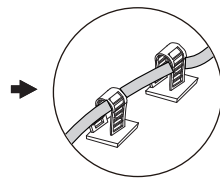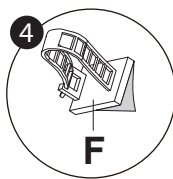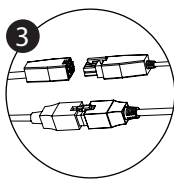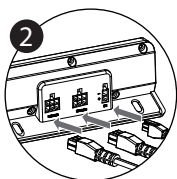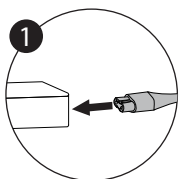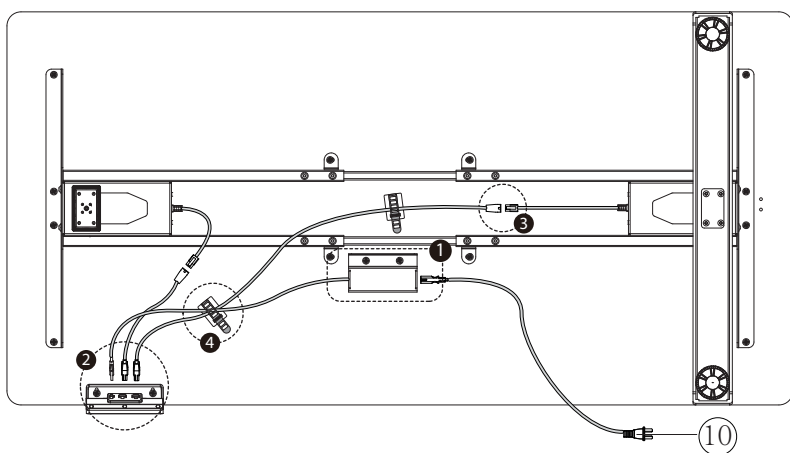

Controller Introduction

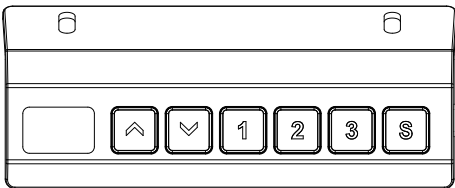 

S Short press the button,the display flashes,Press any of memory key to save the height.

1
2 3 Memory button: Press the **1 2 3** button and the desk will move to the height that was previously set for the button.

^ Press the button to raise the desk. Releasing the button stops the process. The maximum height of the desk is 120 cm.

v Press the button to lower the desk. Releasing the button stops the process. The minimum height of mthe desk is 72 cm.

Reset Press and hold the **v** button for 5 seconds, and the screen will show 'RES.'
Continue holding until the desk goes down to its lowest level and comes back up slightly.

Protection Mode Error Codes	
Hot	Overheat protection: When the motor operates continuously, it will stop running to prevent damage caused by overheating. Wait for a period of time (proposal 15–18 minutes) before making any further height adjustments.
E10	Sensor malfunction warning: Motor safety sensor cannot be detected. Please power off, unplug the cables of the controller, then plug in the cables and connect the power again, and perform rES settings again.
E20	Overloading Warning: Over the max of loading weight. Power off, take the things off the desk, power back on, and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline is detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, please power off, unplug the cables of the controller, then plug in the cables and connect the power again, and perform rES settings again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, please power off, unplug the cables of the controller, then plug in the cables and connect the power again, and perform rES settings again.
E60	Unequal Leg Height Warning: Check whether all the legs are at the same height. If necessary, adjust it by following the reset instructions.

Engineering Mode	
ChangeDisplayed Unit(Un)	Long press the S button, "S--"shows and flashes. Press S again and the display shows "Un". Press 1 to select. Press ^ or v to switch between "S" (metric) or "I n" (imperial). Press S to save your choice.
CollisionForce Detection(CF)	Long press the S button, "S--"shows and flashes. Press S again and the display shows "Un". Press ^ or v to switch to "CF". Press 1 to select. Press ^ or v to switch between "OFF",Low(L), Normal (n) or Heavy (H) collision force detection. Press S to save your choice.