


Controller Introduction

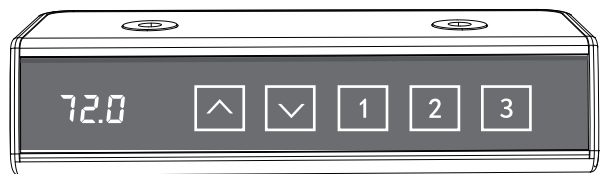

Note:

The desk's movement can be stopped at any time by pressing any button.

The height settings of the desk will remain even if the power is cut.

72.0 LED Display: Press any key once to wake up the display.

Press the **1** or **2** or **3** button, the desk will move to the height that was previously set for that button.

Long press the **▲** button to raise the desk continually, and desk will stop when the button was released or at the max height (46.5" / 118cm)

Long press the **▼** button to lower the desk continually, and desk will stop when the button was released or at the lowest height (28.3" / 72cm)


Memory button setting: adjust desk to the height you prefer, then long press the button **1** or **2** or **3** until LED display shows H1 or H2 or H3 and flashes for about 3 seconds, then LED display shows the height you already set, and height memory setting is done.

Reset Press and hold the **▼** button for 5 seconds, and the screen will show 'RES.'
Continue holding until the desk goes down to its lowest level and comes back up slightly.

Protection Mode Error Codes	
Hot	Overheating Protection: When the motor has been working continuously for 5 minutes, it will stop operating to prevent damage from overheating. Wait for at least 15 minutes before making any further height adjustment.
E10	Sensor malfunction warning: Motor safety sensor cannot be detected. Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E20	Overloading Warning: Over the max of loading weight. Power off, take the things off the desk, power back on, and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline is detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
-	Cable Disconnection Warning: Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.

USER MANUAL

Sit and Stand Desk Frame Assembly Instruction

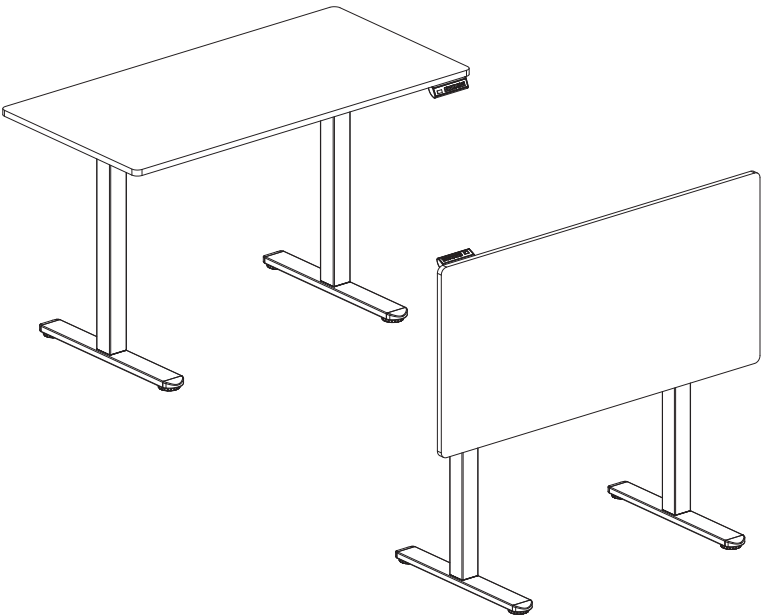

- 3 Height Position Memory
- Vertical Range: 72-118cm



Power Input
100V-240V



Speed
20 mm/s




Motion Noise
<55dB



Load Capability
154 lbs / 70 kg


CAUTION: DO NOT EXCEED
MAXIMUM LISTED WEIGHT
CAPACITY. SERIOUS INJURY
OR PROPERTY DAMAGE MAY
OCCUR!

COMPONENT LIST

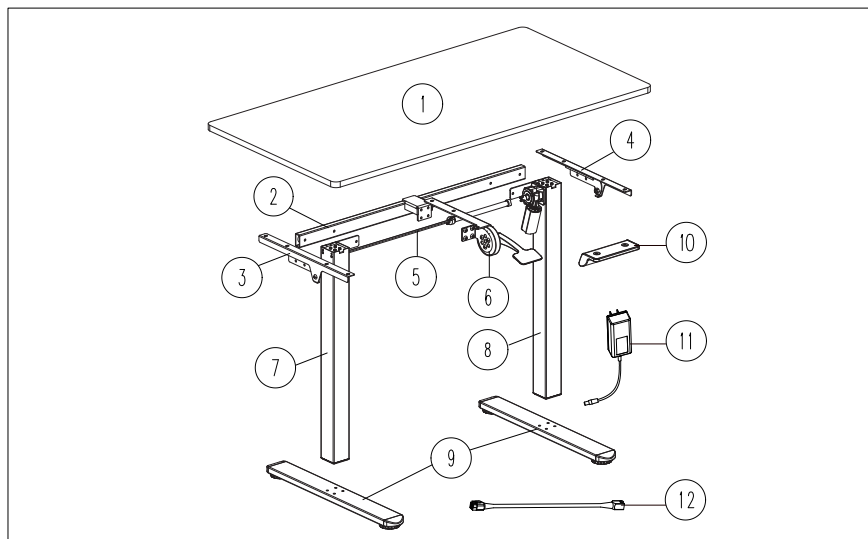


1 	2 	3
4 	5 	6
7 	8 	9
10 	11 	12


Step 7

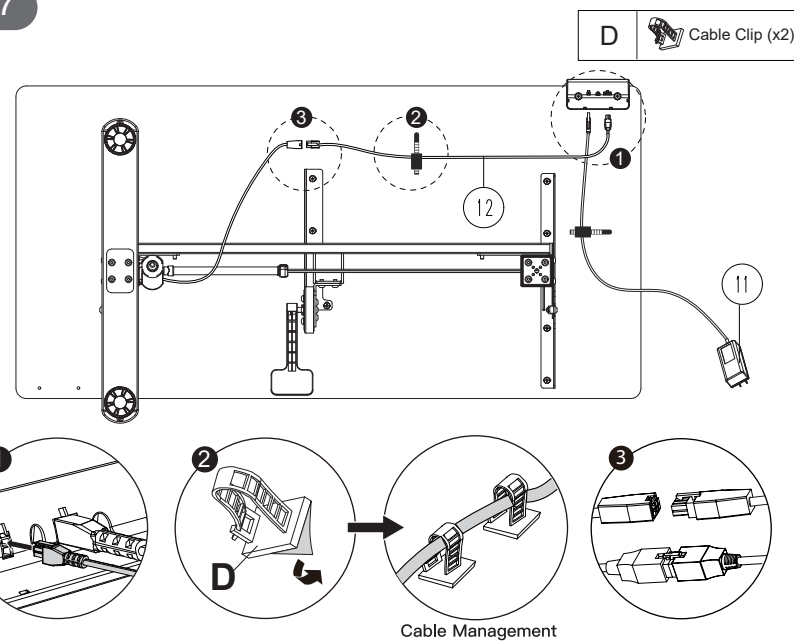


Step 8

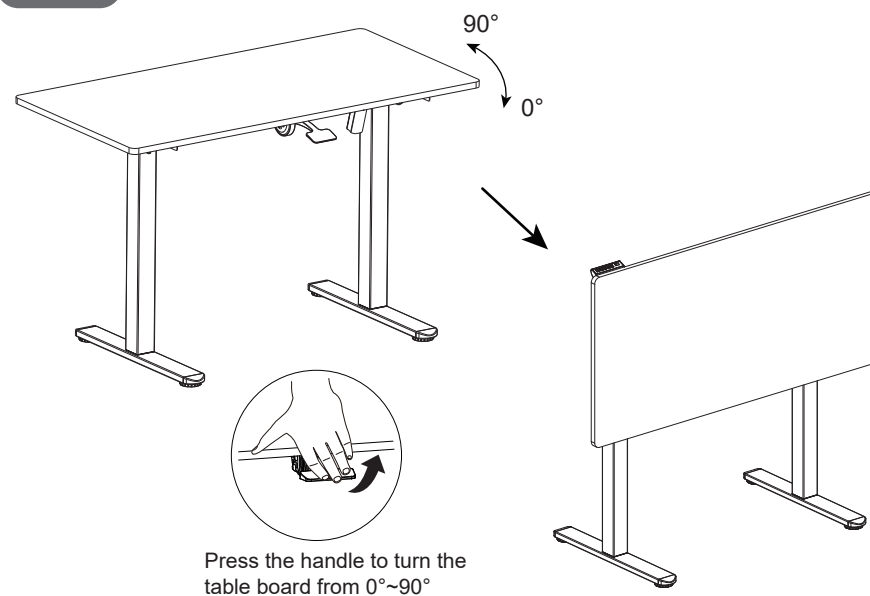




Step 5

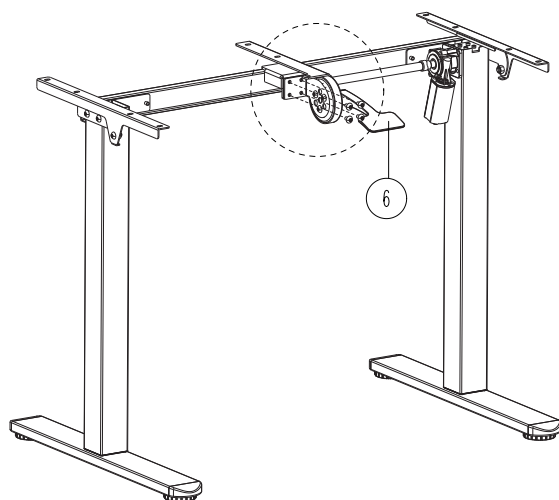


A	 M6×11mm(x4)
F	 S=5mm

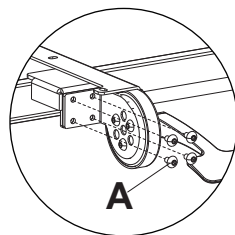


Step 6

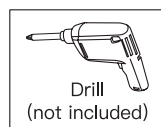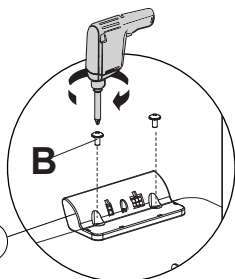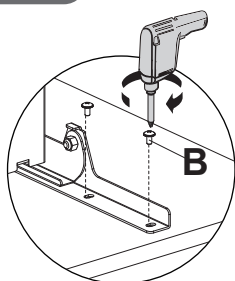

B	 M5×12mm(x13)
---	--

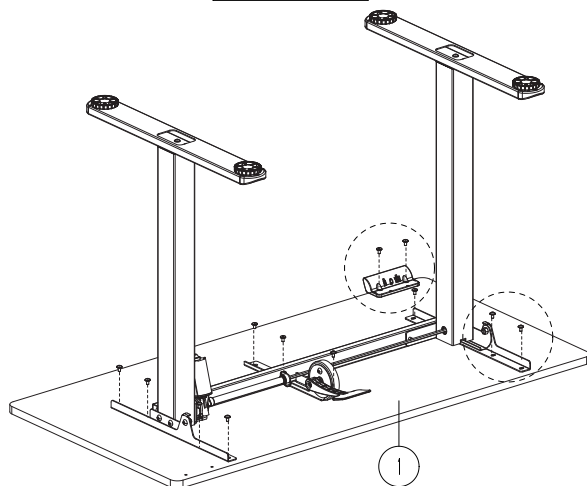

HARDWARE LIST

 
A  Screws M6×11mm (x20)	B  Screws M5×12mm (x13)	C  Foot pads (x4)
D  Cable Clip (x2)	E  Allen Key S=2mm (x1)	F  Allen Key S=5mm (x1)
G  M14 (x1)		

Spare Parts

A  M6×11mm (x2)	B  M5×12mm (x2)
--	--


Step 1

A	 M6×11mm(x4)
F	 S=5mm

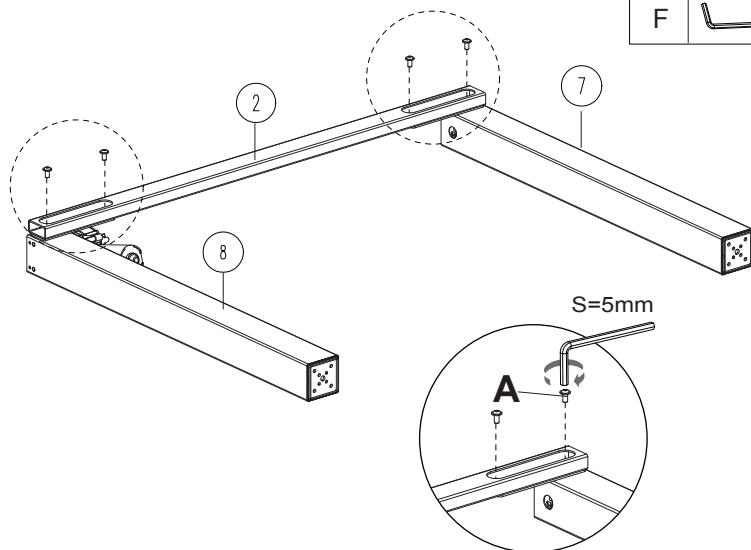


Step 3

A	 M6×11mm(x4)
F	 S=5mm

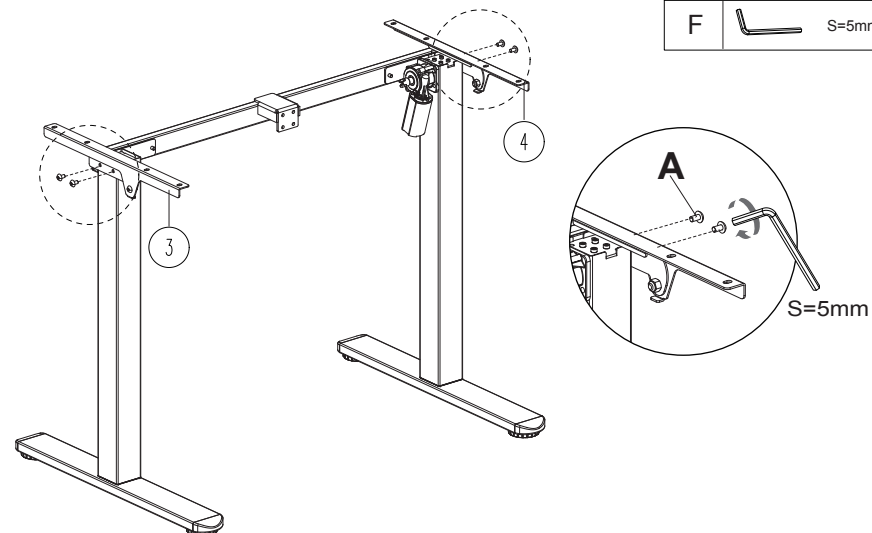

Step 2

C	 Foot pads (x4)	A	 M6×11mm(x8)
G	 M14	F	 S=5mm

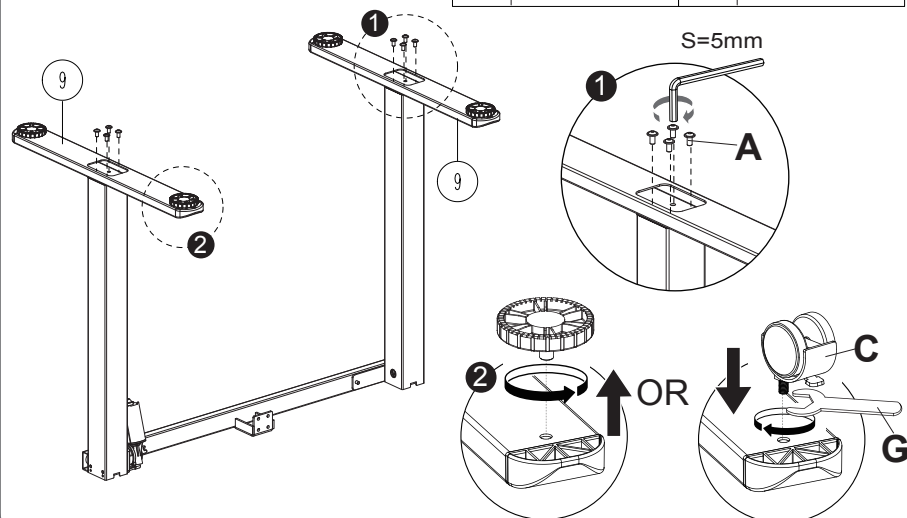

Step 4

