


USER MANUAL

Sit and Stand Desk Assembly Instruction

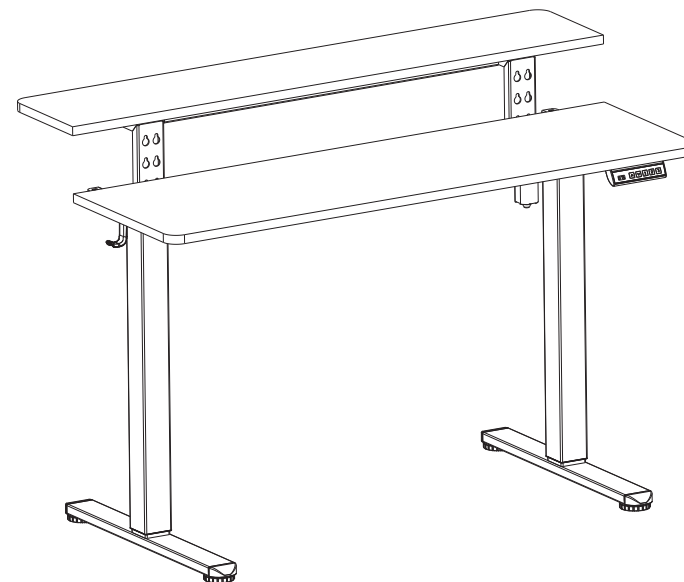

- Desk top Dimensions: 120cm
- 3 Height Position Memory
- Vertical Range: 72-118cm



Power Input
100V-240V



Speed
20 mm/s




Motion Noise
<55dB








Load Capability
154 lbs / 70 kg


CAUTION: DO NOT EXCEED
MAXIMUM LISTED WEIGHT
CAPACITY. SERIOUS INJURY
OR PROPERTY DAMAGE MAY
OCCUR!

COMPONENT LIST

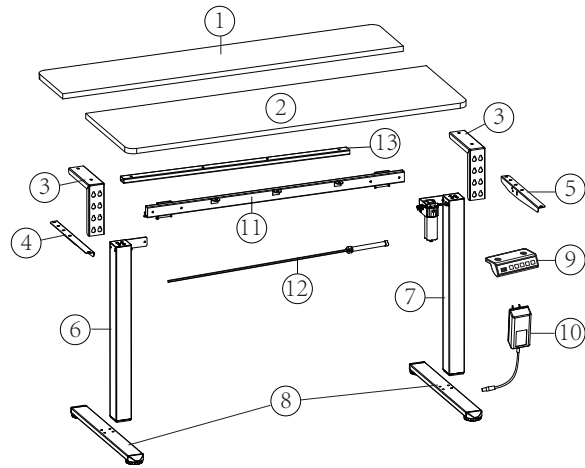

 Desktop (x1)	 Desktop (x1)	 (x2)
 Left Side Plates (x1)	 Right Side Plates (x1)	 Left Table Leg (x1)
 Right Table Leg (x1)	 Leg Base (x2)	 Controller (x1)
 Power (x1)	 Crossbar (x1)	 Transmission rod (x1)
 Crossbar (x1)		

Controller Introduction

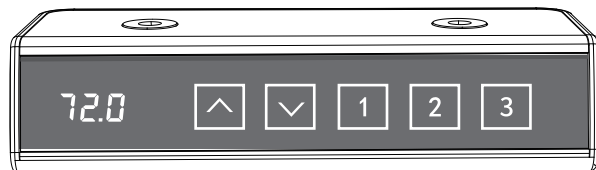

Note:

The desk's movement can be stopped at any time by pressing any button.

The height settings of the desk will remain even if the power is cut.

72.0

LED Display: Press any key once to wake up the display.



Press the **1** or **2** or **3** button, the desk will move to the height that was previously set for that button.



Long press the **Up** button to raise the desk continually, and desk will stop when the button was released or at the max height (46.5" / 118cm)



Long press the **Down** button to lower the desk continually, and desk will stop when the button was released or at the lowest height (28.3" / 72cm)



Memory button setting: adjust desk to the height you prefer, then long press the button **1** or **2** or **3** until LED display shows H1 or H2 or H3 and flashes for about 3 seconds, then LED display shows the height you already set, and height memory setting is done.

Reset

Press and hold the **Down** button for 5 seconds, and the screen will show RES.' Continue holding until the desk goes down to its lowest level and comes back up slightly.

Protection Mode Error Codes


Hot	Overheating Protection: When the motor has been working continuously for 5 minutes, it will stop operating to prevent damage from overheating. Wait for at least 15 minutes before making any further height adjustment.
E10	Sensor malfunction warning: Motor safety sensor cannot be detected. Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E20	Overloading Warning: Over the max of loading weight. Power off, take the things off the desk, power back on, and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline is detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
-	Cable Disconnection Warning: Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.

HARDWARE LIST


A Screws M6×35mm (x8)	B Screws M6×11mm (x8)	C Screws M6×15mm (x4)
D Screws M5×12mm (x27)	E Allen Key S=2mm (x1)	F Allen Key S=5mm (x1)
G Cable Clip (x2)	H Headphone hanger (x2)	
Spare Parts A M6×35mm (x1) B M6×11mm (x2) C M6×15mm (x1) D M5×12mm (x2)		

Step 1

B	 M6×11mm(x4)
F	 S=5mm




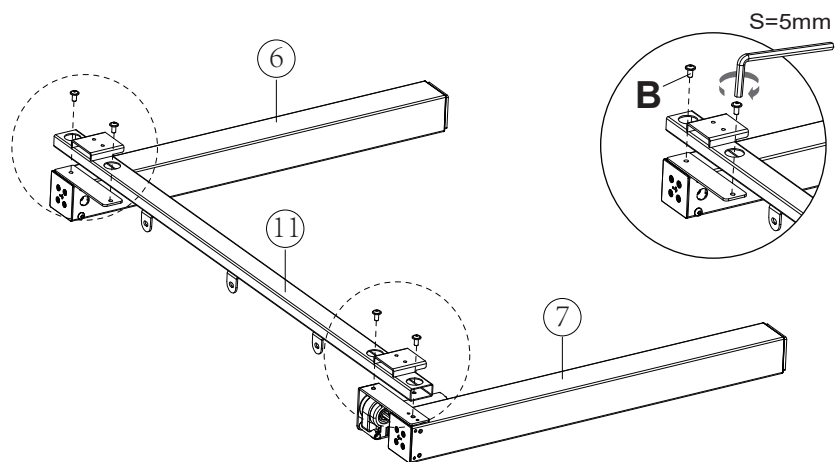


A	 M6×35mm(x8)
F	 S=5mm

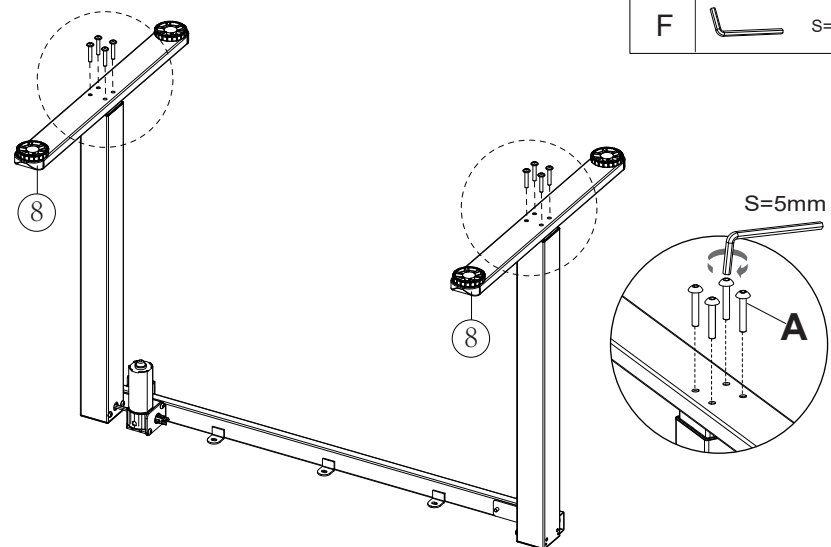


Step 7



G	 Cable Clip (x2)
---	---

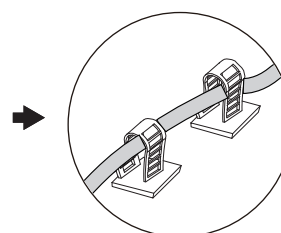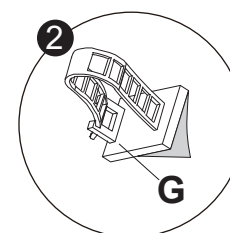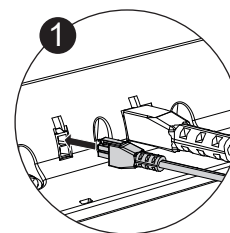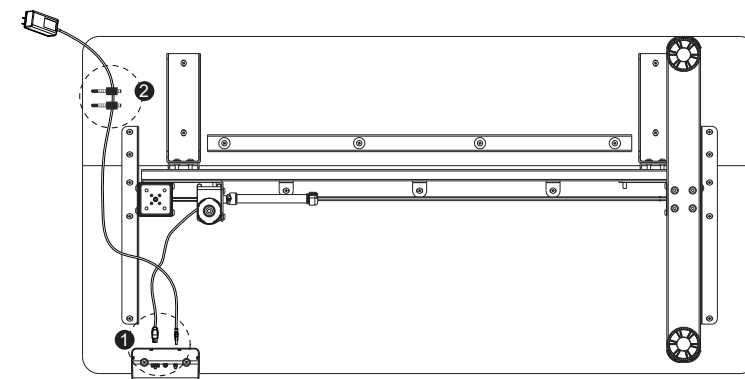

Step 8

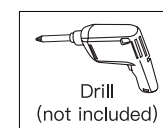


D	 M5×12mm(x4)
H	 Headphone hanger (x2)

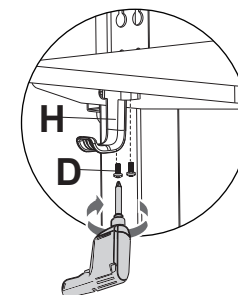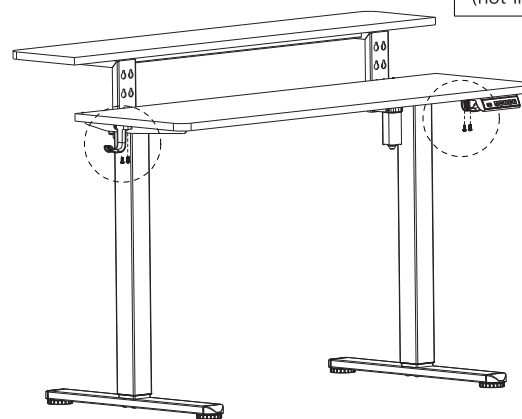


Step 6 Table board elevation method


F  S=5mm

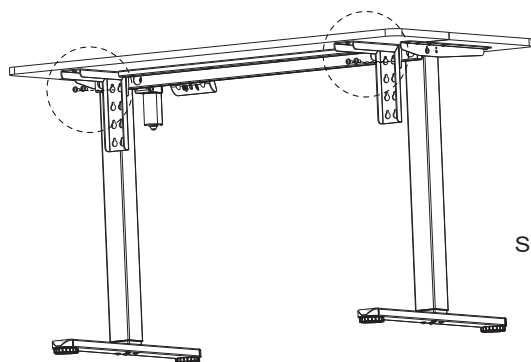


S=5mm

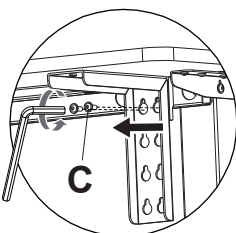

Loosen the screws

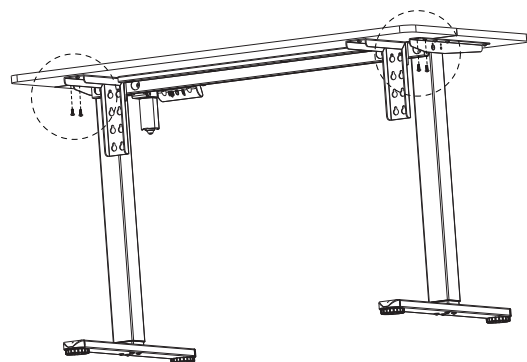


Drill
(not included)

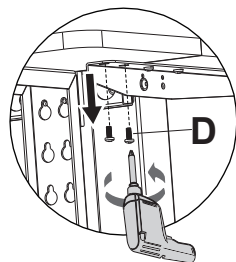


Loosen the screws

F  S=5mm

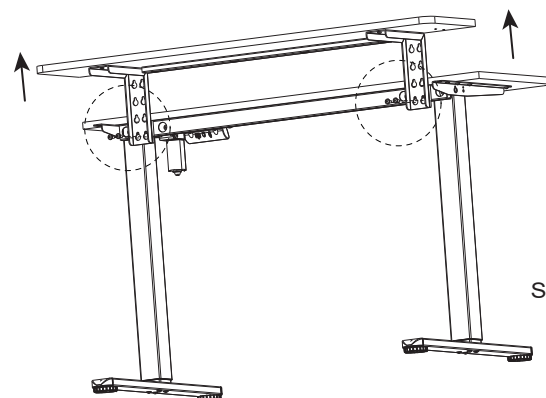



S=5mm

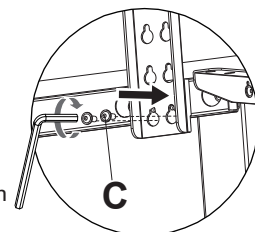

Tighten the screws



Step 2

B  M6×11mm(x4)
F  S=5mm

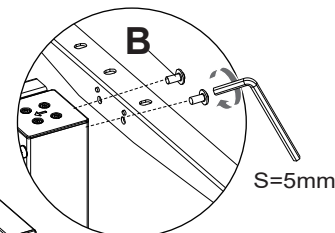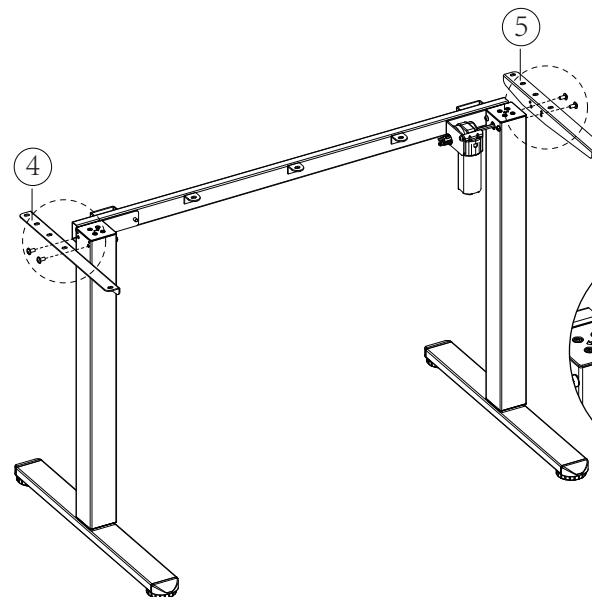

S=5mm



C  M6×15mm(x4)
F  S=5mm

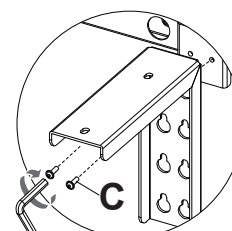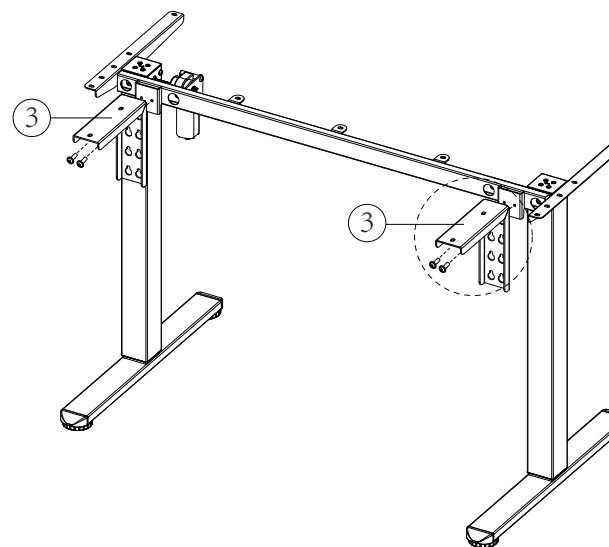


S=5mm

Step 3


E  S=2mm

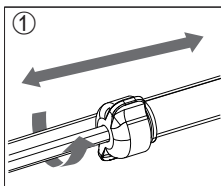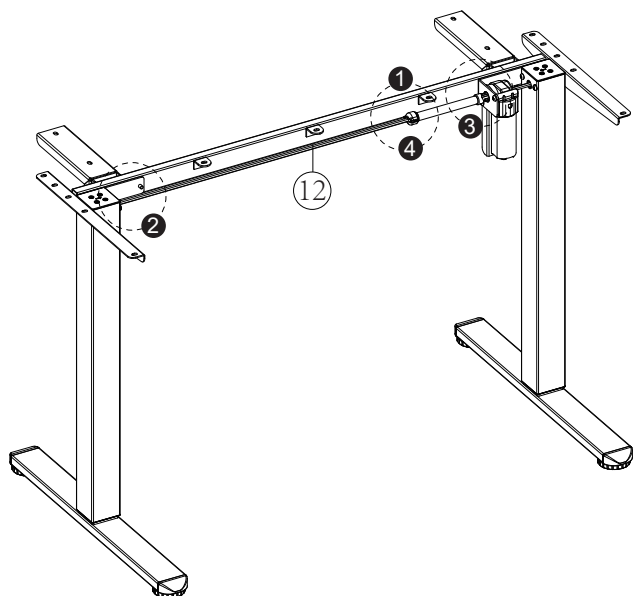

Loosen the knob

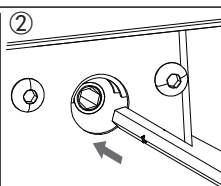


Insert the transmission rod into the hex hole and turn the transmission rod clockwise until the left leg goes to the lowest position.

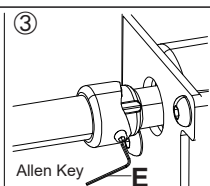

Insert the other end of the transmission rod into the slot on the leg (You may rotate the rod slightly for better installation).

Secure the transmission rod to the slot by tightening the pre-assembled set screw using the small Allen key.

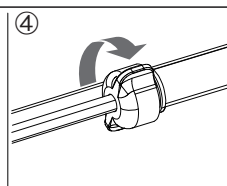


Tighten the knob


Step 4

D  M5×12mm(x4)


Drill
(not included)

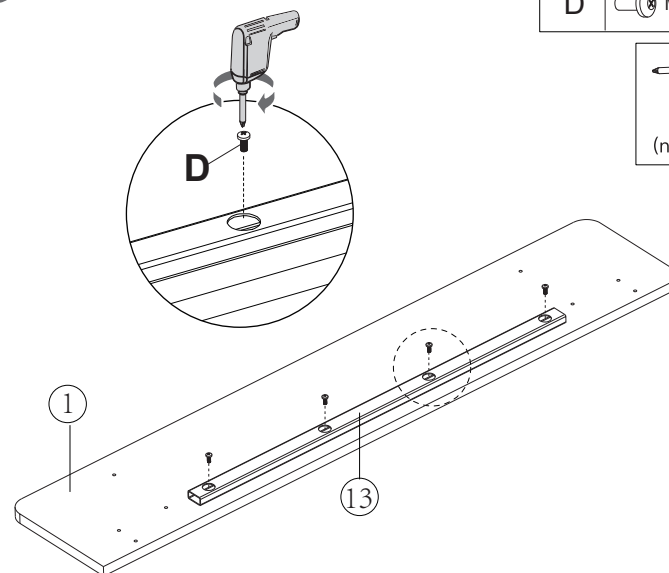

Step 5

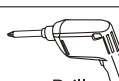
Drill
(not included)

D  M5×12mm(x19)

