




4

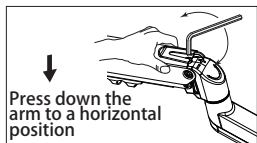

Be sure to keep the arm in horizontal position during adjustment. Or else, it would be difficult to adjust the mount.

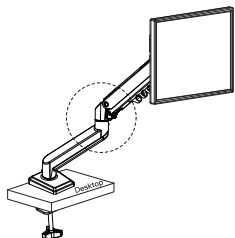

Press down the arm to a horizontal position

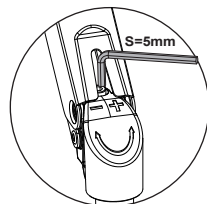


NOTE: Turn clockwise to reduce tension for lighter monitors and counter-clockwise to increase tension for heavier monitors.

S=5mm


B

Use a hex wrench to adjust the height tension of the gas spring arm, to keep different weight of monitors still at any position.

5

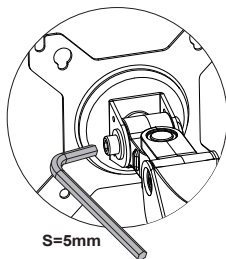

Use a hex wrench to adjust the damp for tilting. Turn counter-clockwise to reduce damping and clockwise to increase damping.

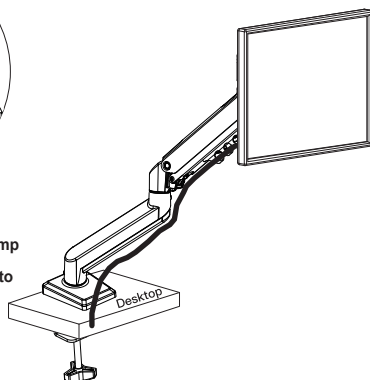


S=5mm

B




Insert cables into cable covers. Leave enough slack of cables at arm joints for full adjustment.

Gas Spring Aluminum LCD Monitor Desk Mount

UPLITE

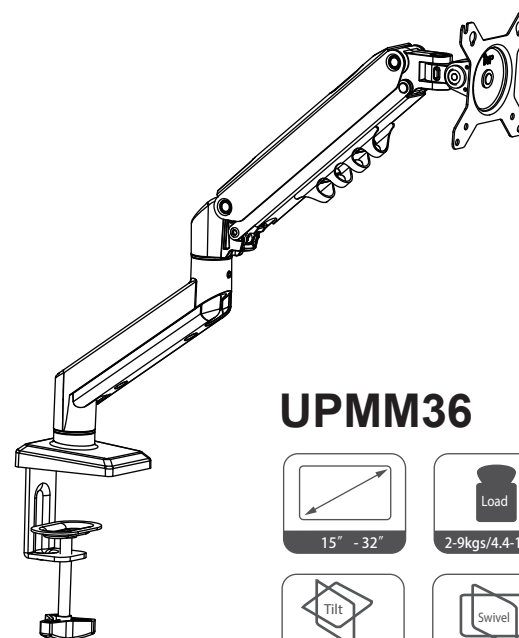

UPMM36



Installation


INSTRUCTIONS

WARNING STATEMENTS

Warning


- ⚠ Prior to the installation of this product, the installation instruction must be read and completely understood. Failure to do so may result in personal injury, property damage or voiding of factory warranty.
- ⚠ Do not install on a structure that is prone to vibration, movement or chance of impact. Reinforce the structure as required before installation.
- ⚠ The desk clamp can support a maximum thickness of 6 cm. Confirm the desk edge before installation.
- ⚠ Pay attention to the weight capacity of the mount. Exceeding the limitation can result in function unworkable or even serious personal injury and property damage.
- ⚠ Never operate the mount if parts are missing or damaged. Contact your local service center for warranty service.

PRODUCT LINE GRAPH

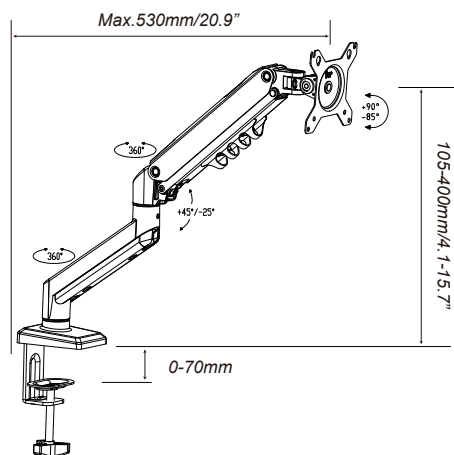


OR
3

Recessed surface installation: Put spacers between headplate and monitor. Install the upper two screws and don't screw them tight. Leave some space and hang the monitor on the head plate.

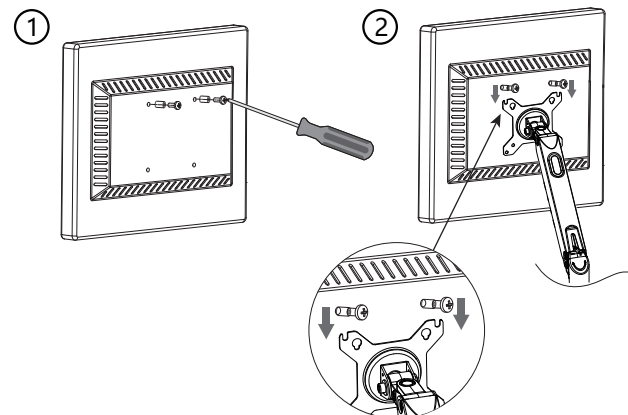

③ Recessed surface installation: Put spacers between headplate and monitor. Install the lower two screws and fasten the upper two screws.

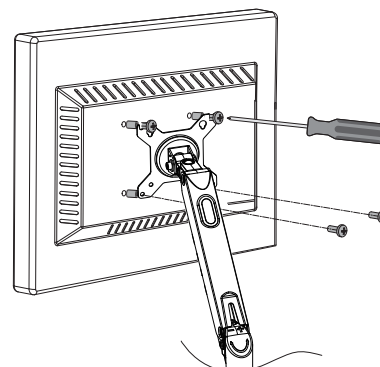

M4x30


12x5.8x16

A




3

Flush surface installation: Install the upper two screws and don't screw them tight. Leave some space and hang the monitor on the head plate.

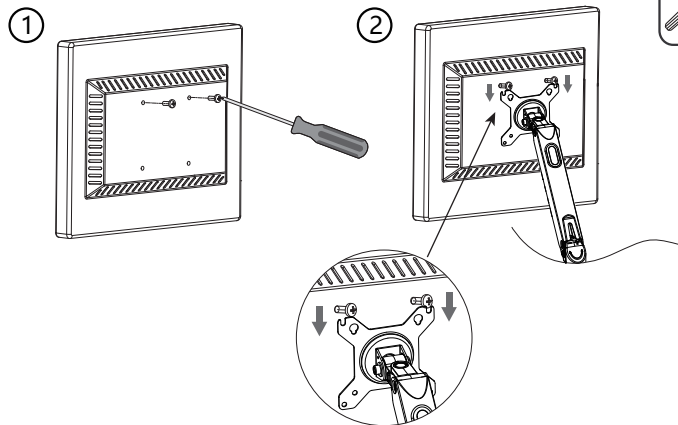

③ Flush surface installation: Install the lower two screws and fasten the upper two screws.

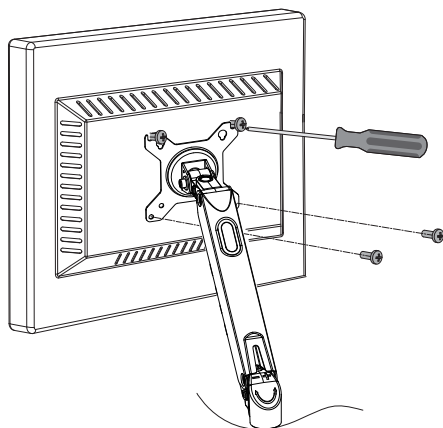


M4x12




A




TOOLS REQUIRED NOT INCLUDED




PARTS INCLUDED

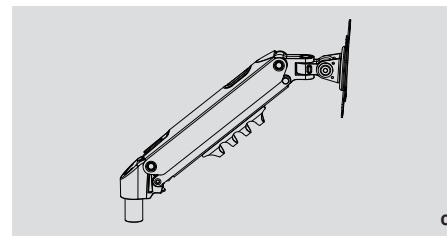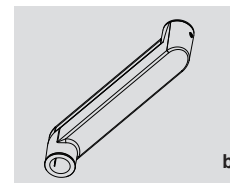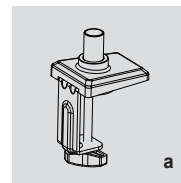


A	 M4x12 (x4)	 M4x30 (x4)	 12x5.8x16 (x4)
B	 S=4mm (x1)	 S=5mm (x1)	
C	 (x3)		

1 Desk Clamp installation

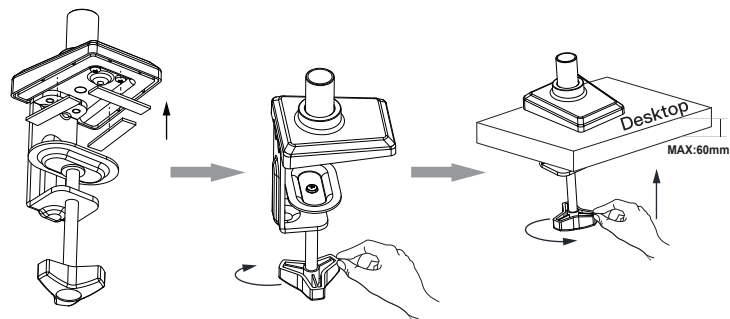


OR Grommet installation

NOTE: If your desk has an existing grommet hole, Please install directly. If there is no existing grommet hole, make a mark on your mounting surface, and drill a hole (40-60mm) in the mounting surface.

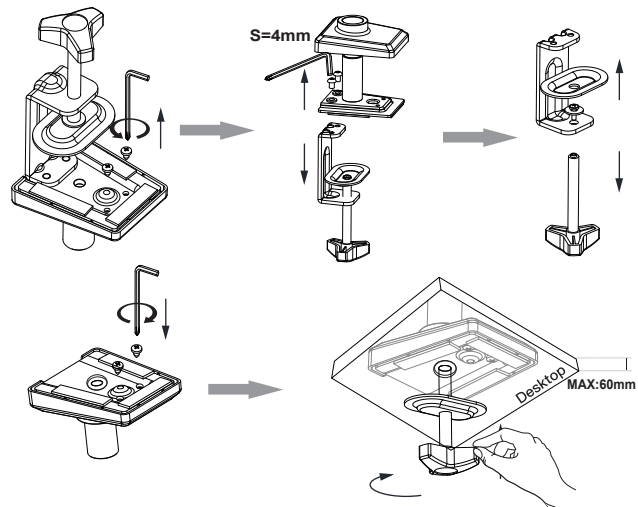

2

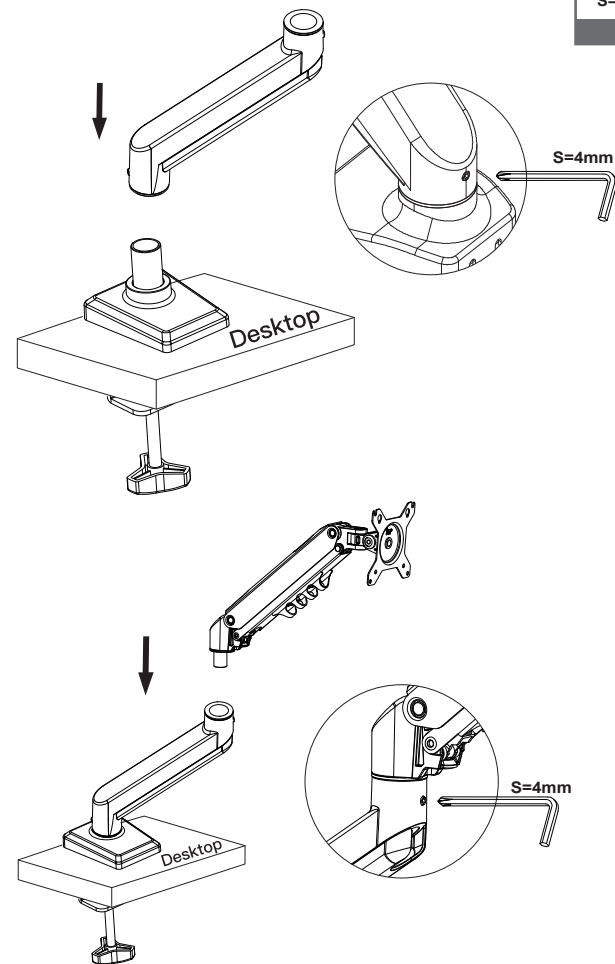

Install the lower arm to the base.
Insert the gas spring arm above the lower arm.